


AMAL

SPARES & SETTINGS

TYPE 308 CARBURETTOR

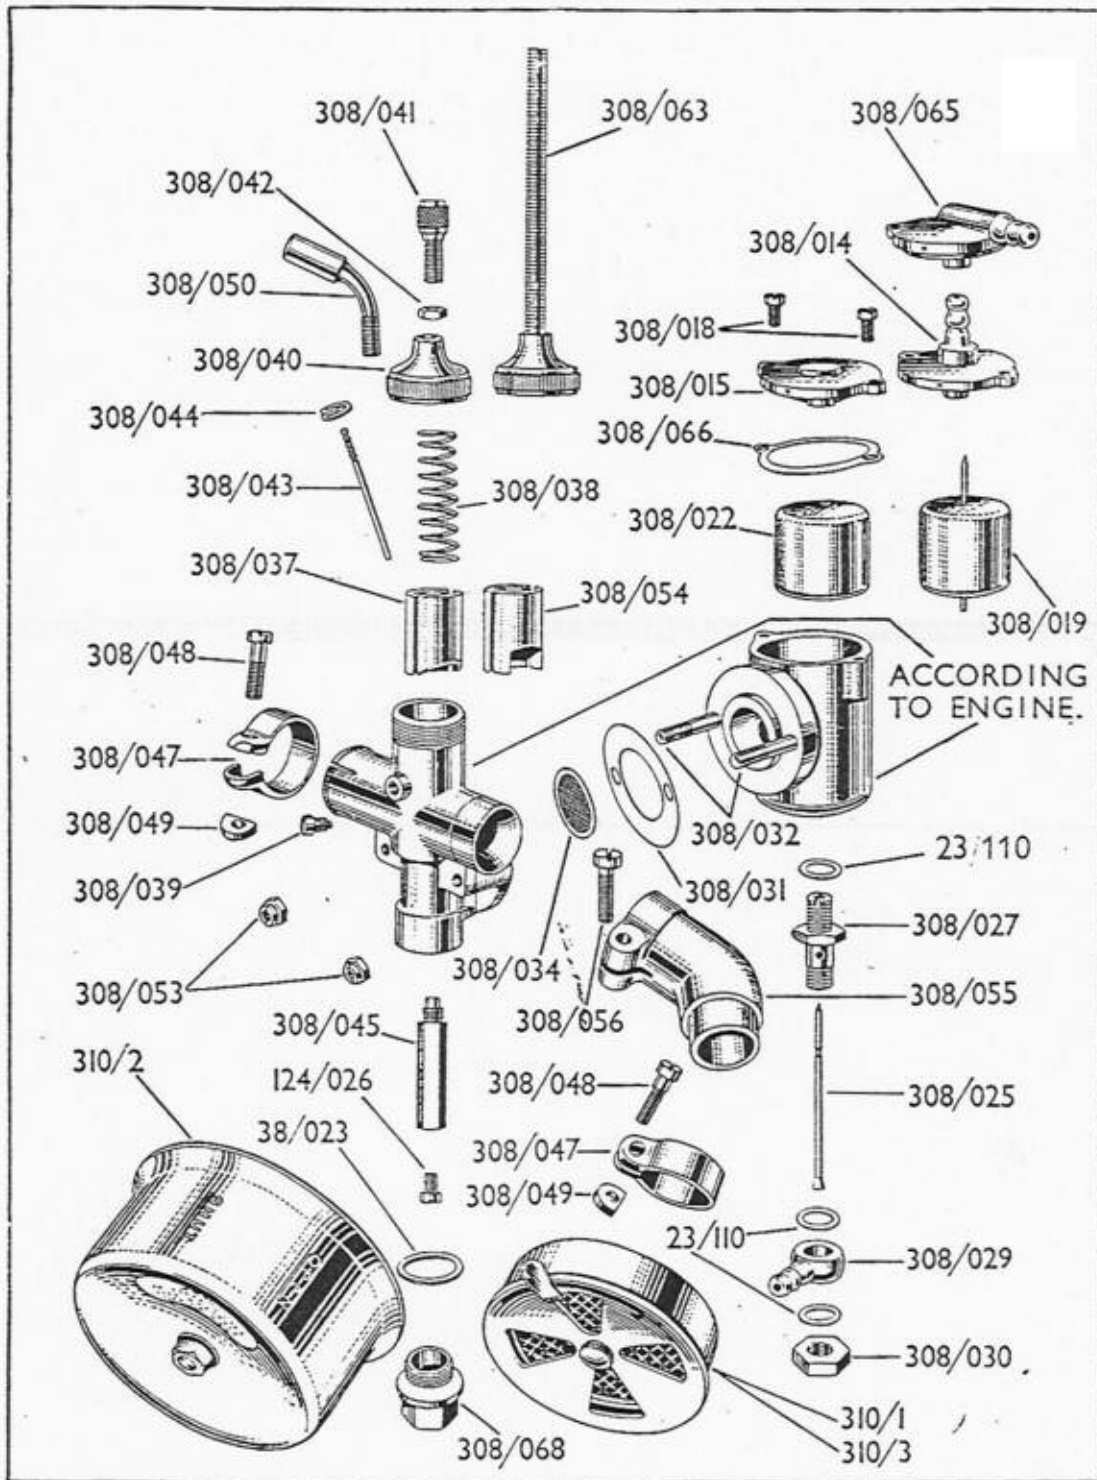

(THIS LIST IS PRINTED IN ENGLAND, AND IS ISSUED SUBJECT TO PRICES RULING AT THE DATE OF DELIVERY).

AMAL LTD., Holdford Road, Witton, BIRMINGHAM, 6
ENGLAND.

TELEPHONE: BIRCHFIELDS 4571 (6 lines).

TELEGRAMS: AMALCARB (PHONE), BIRMINGHAM.

SETTINGS LIST.

Engine	Carb. Type No.	Internal Bore	Jet Size	Throttle Valve	Throttle Needle Position	Needle Jet
BANTAMOTA	308/15	.39"	27	No. 2	3	.0745
BERINI	308/1	.39"	32	No. 4	3	.0745
BUSY BEE	308/2	.312	27	No. 2	3	.078
CYCLAID	308/5	.39"	25	No. 2	3	.078
CYCLEMASTER	308/11	.39"	30	No. 2	3	.0745
CYCLEMASTER	308/11	.39"	35	No. 2	3	.0745
CYMOTA	308/12	.312	25	No. 2	1	.078
DIESELLA	308/15	.39"	32	No. 2	3	.078
J.A.P., MODEL "O" ..	308/2	.312	27	No. 2	3	.078
J.A.P., "MINIATURE"	308/17	.312	25	No. 2	3	.078
J.A.P., MODEL "O"	308/28	.312	25	No. 2	3	.078
KOLBERG CASPARY ..	308/20	10.5 mm.	32	No. 2	3	.078
KOLBERG CASPARY ..	308/21	.39	25	No. 4	3	.0745
MILLER	308/23	.39	30	No. 2	3	.0745
MOCYC	308/16	.39	27	No. 2	5	.078
MOTOMITE	308/10	.39"	27	No. 2	3	.078

GUARANTEE.—The Company take all possible reasonable care in the manufacture and the quality of their products. Purchasers are informed that, any part proved to be defective in manufacture or quality, and returned to the works within six months of its purchase new, will be replaced. The Company must respectfully point out however, that its responsibility and that of its agents, stockists and dealers, is limited to this Guarantee, and that they cannot, under any circumstances, be held responsible for any loss or for any contingent or resulting liability arising through any defect. These conditions of sale and use also apply when the Company's products form part of the original equipment of machines purchased new.


Component	308/1	308/2	308/4	308/5	308/6	List Price	
						s.	d.
Carburettor complete, less Controls & Cables	308 1	308/2	308 4	308/5	308/6	37	6
Mixing Chamber Body	308 001	308/003	308/001	308/002	308/003	7	6
Mixing Chamber Top Cover	308 040	308/040	308/040	308/040	308/040	1	6
Cable Adjuster	308 041	308/041	308/041	308/041	308/041		4
Cable Adjuster Locknut	308 042	308/042	308/042	308/042	308/042		1
Cable Guide	—	—	308 050	—	—		9
Throttle Valve	308 054	308/037	308/037	308/037	308/037	2	6
Throttle Valve Spring	308 038	308/038	308/038	308/038	308/038		4
Throttle Valve Locating Screw	308 039	308/039	308/039	308/039	309/039		1
Throttle Needle	308 043	308/043	308/043	308/043	308/043	1	6
Throttle Needle Clip	308 044	308/044	308/044	308/044	308/044		2
Needle Jet	308 045	308/045	308/045	308/045	308/045	2	6
Main Jet	124 026	124/026	124/026	124/026	124/026		8
Needle Jet Cover	308 068	308/068	308/068	308/068	308/068	1	0
Washer for Needle Jet Cover	38 023	38/023	38/023	38/023	38/023		2
Outlet Clip	308 047	308/047	308/047	308/047	308/047		9
Outlet Clip Pin	308 048	308/048	308/048	308/048	308/048		2
Outlet Clip Pin Nut	308 049	308/049	308 049	308/049	308/049		1
Strangler Gauze Air Intake complete ..	310 2	310/1	—	310/1	—	7	6
Cable Nipple	308 051	308/051	308/051	308/051	308 051		1
Float Chamber Body	308 013	308/013	308/013	308/013	308/012	5	0
Float Chamber Body Flange Studs ..	308 032	308/032	308/032	308/032	308/032		3
Flange Stud Nut	308 053	308/053	308/053	308/053	308/053		2
Flange Washer	308 031	308/031	308/031	308/031	308/031		2
Filter Gauze	308 034	308/034	308/034	308/034	308/034		4
Float Chamber Cover complete ..	308 015	308/015	308/015	308/015	308/014	1	6
Float Chamber Cover Joint Washer ..	308 066	308/066	308/066	308/066	308/066		2
Cover Securing Screw	308 018	308/018	308/018	308/018	308/018		1
Float	308 022	308/022	308/022	308/022	—	2	6
Float Needle	308 025	308/025	308/025	308/025	—	1	0
Float and Needle Combined (Top Feed)	—	—	—	—	308 019	3	6
Needle Seating	308 027	308/027	308 027	308/027	—	1	0
Banjo	308 029	308/029	308/029	308/029	—	1	6
Needle Seating and Banjo Washer ..	23 110	23/110	23/110	23/110	—		1
Banjo Nut	308 030	308/030	308/030	308/030	—		6
Throttle Cable complete (AF1152) ..	224 757	—	—	—	—	2	6
Throttle Cable complete	—	—	—	244/891	—	3	0
Clutch Cable complete	244 756	—	—	—	—	3	6
Throttle Lever complete	355 2	—	—	—	—	9	0
Clutch Lever complete	18 643	—	—	—	—	10	6

Component	308 7	308 9	308/10	308/11	308/12	List Price
Carburettor complete, less Controls & Cables	308 7	308 9	308/10	308/11	308/12	s. d. 37 6
Mixing Chamber Body	308 008	308 001	308 002	308 001	308 009	7 6
Mixing Chamber Liner	308 064	—	—	—	—	6
Mixing Chamber Top Cover	—	308 040	308/040	308/040	308/040	1 6
Mixing Chamber Top Cover complete ..	308 063	—	—	—	—	2 3
Cable Adjuster	—	308 041	308/041	308 041	308/041	4
Cable Adjuster Locknut	—	308 042	308/042	308/042	308/042	1
Cable Guide	—	—	—	308 050	—	9
Throttle Valve	308 037	308 037	308 037	308 037	308 037	2 6
Throttle Valve Spring	308 038	308 038	308/038	308 038	308/038	4
Throttle Valve Locating Screw	308 039	308 039	308/039	308 039	308/039	1
Throttle Needle	308 043	308 043	308/043	308 043	308/043	1 6
Throttle Needle Clip	308 044	308 044	308/044	308 044	308/044	2
Needle Jet	308 045	308 045	308 045	308 045	308 045	2 6
Main Jet	124 026	124 026	124 026	124 026	124 026	8
Needle Jet Cover	308 068	308 068	308 068	308 068	308 068	1 0
Washer for Needle Jet Cover	38 023	38 023	38 023	38 023	38 023	2
Outlet Clip	—	308 047	308 047	308 047	308 047	9
Outlet Clip Pin	—	308 048	308 048	308 048	308 048	2
Outlet Clip Pin Nut	308 049	308 049	308 049	308 049	308 049	1
Strangler Gauze Air Intake complete ..	—	—	310/1	310 1	310 3	7 6
Elbow for Intake	—	—	—	308 055	—	2 6
Securing Screw for Elbow	—	—	—	308 056	—	3
Cable Nipple	308 051	308 051	308 051	308 051	308 051	1
Float Chamber Body	308 028	308 012	308 012	308 013	308 013	5 0
Float Chamber Body Flange Studs ..	308 032	308 032	308 032	308 032	308 032	3
Flange Stud Nut	308 053	308 053	308 053	308 053	308 053	2
Flange Washer	308 031	308 031	308 031	308 031	308 031	2
Filter Gauze	308 034	308 034	308 034	308 034	308 034	4
Float Chamber Cover complete ..	308 065	308 014	308 014	308 015	308 015	1 6
Float Chamber Cover Joint Washer ..	308 066	308 066	308 066	308 066	308 066	2
Cover Securing Screw	308 018	308 018	308 018	308 018	308 018	1
Float	—	—	—	308 022	308 022	2 6
Float Needle	—	—	—	308 025	308 025	1 0
Float and Needle Combined (Top Feed)	308 019	308 019	308 019	—	—	3 6
Needle Seating	—	—	—	308 027	308 027	1 0
Banjo	—	—	—	308 029	308 029	1 6
Needle Seating and Banjo Washer ..	—	—	—	23 110	23 110	1
Banjo Nut	—	—	—	308 030	308 030	6
Throttle Cable complete (AF1152) ..	—	—	—	244 678	—	4 0
Throttle Lever complete	—	—	—	12 524	—	9 0

Component	308.13	308.15	308.16	308.17	308.20	List Price	
						s.	d.
Carburettor complete, less Controls & Cables	308.13	308.15	308.16	308.17	308.20	37	6
Mixing Chamber Body	308.006	308.003	308.002	308.006	308.087	7	6
Mixing Chamber Top Cover	308.040	308.040	308.040	308.040	308.040	1	6
Cable Adjuster	308.041	308.041	308.041	308.041	308.091		4
Cable Adjuster Locknut	308.042	308.042	308.042	308.042	308.042		1
Throttle Valve	308.037	308.037	308.037	308.037	308.037	2	6
Throttle Valve Spring	308.038	308.038	308.038	308.038	308.038		4
Throttle Valve Locating Screw ..	308.039	308.039	308.039	308.039	308.039		1
Throttle Needle	308.043	308.043	308.043	308.043	308.043	1	6
Throttle Needle Clip	308.044	308.044	308.044	308.044	308.044		2
Needle Jet	308.045	308.045	308.045	308.045	308.045	2	6
Main Jet	124.026	124.026	124.026	124.026	124.026		8
Needle Jet Cover	308.068	308.068	308.068	308.068	308.068	1	0
Washer for Needle Jet Cover	38.023	38.023	38.023	38.023	38.023		2
Outlet Clip	308.047	308.047	308.047	308.105	308.105		9
Outlet Clip Pin	308.048	308.048	308.048	335.022	335.022		2
Outlet Clip Pin Nut	308.049	308.049	308.049	308.106	308.106		1
Strangler Gauze Air Intake complete ..	—	310.1	310.1	310.1	310.1	7	6
Elbow for Intake	—	—	308.055	—	—	2	6
Securing Screw for Elbow	—	—	308.056	—	—		3
Cable Nipple	308.051	308.051	308.051	308.051	308.051		1
Float Chamber Body	308.067	308.013	308.012	308.013	308.088	5	0
Float Chamber Body Flange Studs ..	308.032	308.032	308.032	308.032	308.032		3
Flange Stud Nut	308.053	308.053	308.053	308.053	308.053		2
Flange Washer	308.031	308.031	308.031	308.031	308.094		2
Filter Gauze	308.034	308.034	308.034	308.034	308.034		4
Float Chamber Cover complete	308.015	308.015	308.014	308.015	308.089	1	6
Float Chamber Cover Joint Washer ..	308.066	308.066	308.066	308.066	308.066		2
Cover Securing Screw	308.018	308.018	308.018	308.018	308.018		1
Float	308.022	308.022	—	308.022	—	2	6
Float Needle	308.035	308.035	—	308.025	—	1	0
Float and Needle Combined (Top Feed)	—	—	308.019	—	308.019	3	6
Needle Seating	308.027	308.027	—	308.027	—	1	0
Banjo	308.029	308.029	—	308.029	—	1	6
Needle Seating and Banjo Washer ..	23.110	23.110	—	23.110	—		1
Banjo Nut	308.030	308.030	—	308.030	—		6
Throttle Operating Rod complete ..	308.093	—	—	—	308.093	1	6

Component	308/21	308/23	308 28	List Price
Carburettor complete, less Controls & Cables	308/21	308/23	308/28	s. d. 37 6
Mixing Chamber Body	308/005	308/100	308/003	7 6
Mixing Chamber Top Cover	308/040	308/040	308/040	1 6
Cable Adjuster	308/041	308/041	308/041	4
Cable Adjuster Locknut	308/042	308/042	308/042	1
Throttle Valve	308/037	308/037	308/037	2 6
Throttle Valve Spring	308/038	308/038	308/038	4
Throttle Valve Locating Screw	308/039	308/039	308/039	1
Throttle Needle	308/043	308/043	308/043	1 6
Throttle Needle Clip	308/044	308/044	308/044	2
Needle Jet	308/045	308/045	308/045	2 6
Main Jet	124/026	124/026	124/026	8
Needle Jet Cover	308/068	308/068	308/068	1 0
Washer for Needle Jet Cover	38/023	38/023	38/023	2
Outlet Clip	308/105	308/105	308/105	9
Outlet Clip Pin	335/022	335/022	335/022	2
Outlet Clip Pin Nut	308/106	308/106	308/106	1
Strangler Gauze Air Intake complete	310/2	310/6	—	7 6
Cable Nipple	308/051	308/051	308/051	1
Float Chamber Body	308/099	308/013	308/013	5 0
Float Chamber Body Flange Studs	308/032	308/032	308/032	3
Flange Stud Nut	308/053	308/053	308/053	2
Flange Washer	308/031	308/031	308/031	2
Filter Gauze	308/034	308/034	308/034	4
Float Chamber Cover complete	308/014	308/015	—	1 6
Float Chamber Cover complete	—	—	308/112	2 6
Float Chamber Cover Joint Washer	308/066	308/066	308/066	2
Cover Securing Screw	308/018	308/018	308/018	1
Float	—	308/022	308/022	2 6
Float Needle	—	308/025	308/025	1 0
Float and Needle Combined (Top Feed)	308/019	—	—	3 6
Needle Seating	—	308/027	308/027	1 0
Banjo	—	308/029	308/029	1 6
Needle Seating and Banjo Washer	—	23/110	23/110	1
Banjo Nut	—	308/030	308/030	6
Tickler	—	—	308/109	6
Tickler Bush	—	—	308/110	6
Tickler Spring	—	—	308/111	2
Throttle Lever complete	—	314/1	—	10 6
Throttle Lever complete	—	—	355/2	9 0
Clutch Lever complete	—	18 643	—	10 6
Throttle Cable complete	—	244 779	—	2 6
Decompressor Cable complete	—	244 780	—	3 6

IceniCAM Information Service

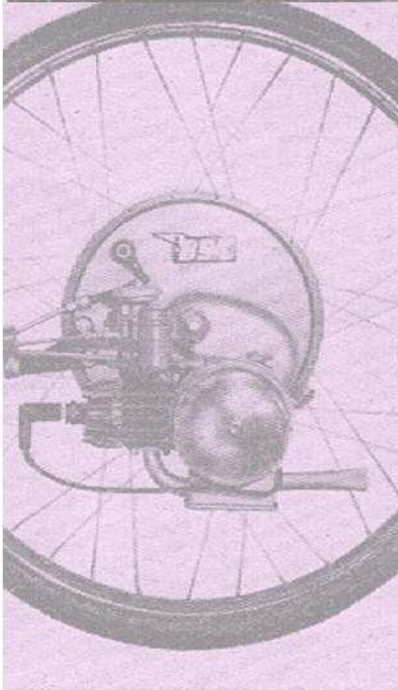

www.icenicam.org.uk