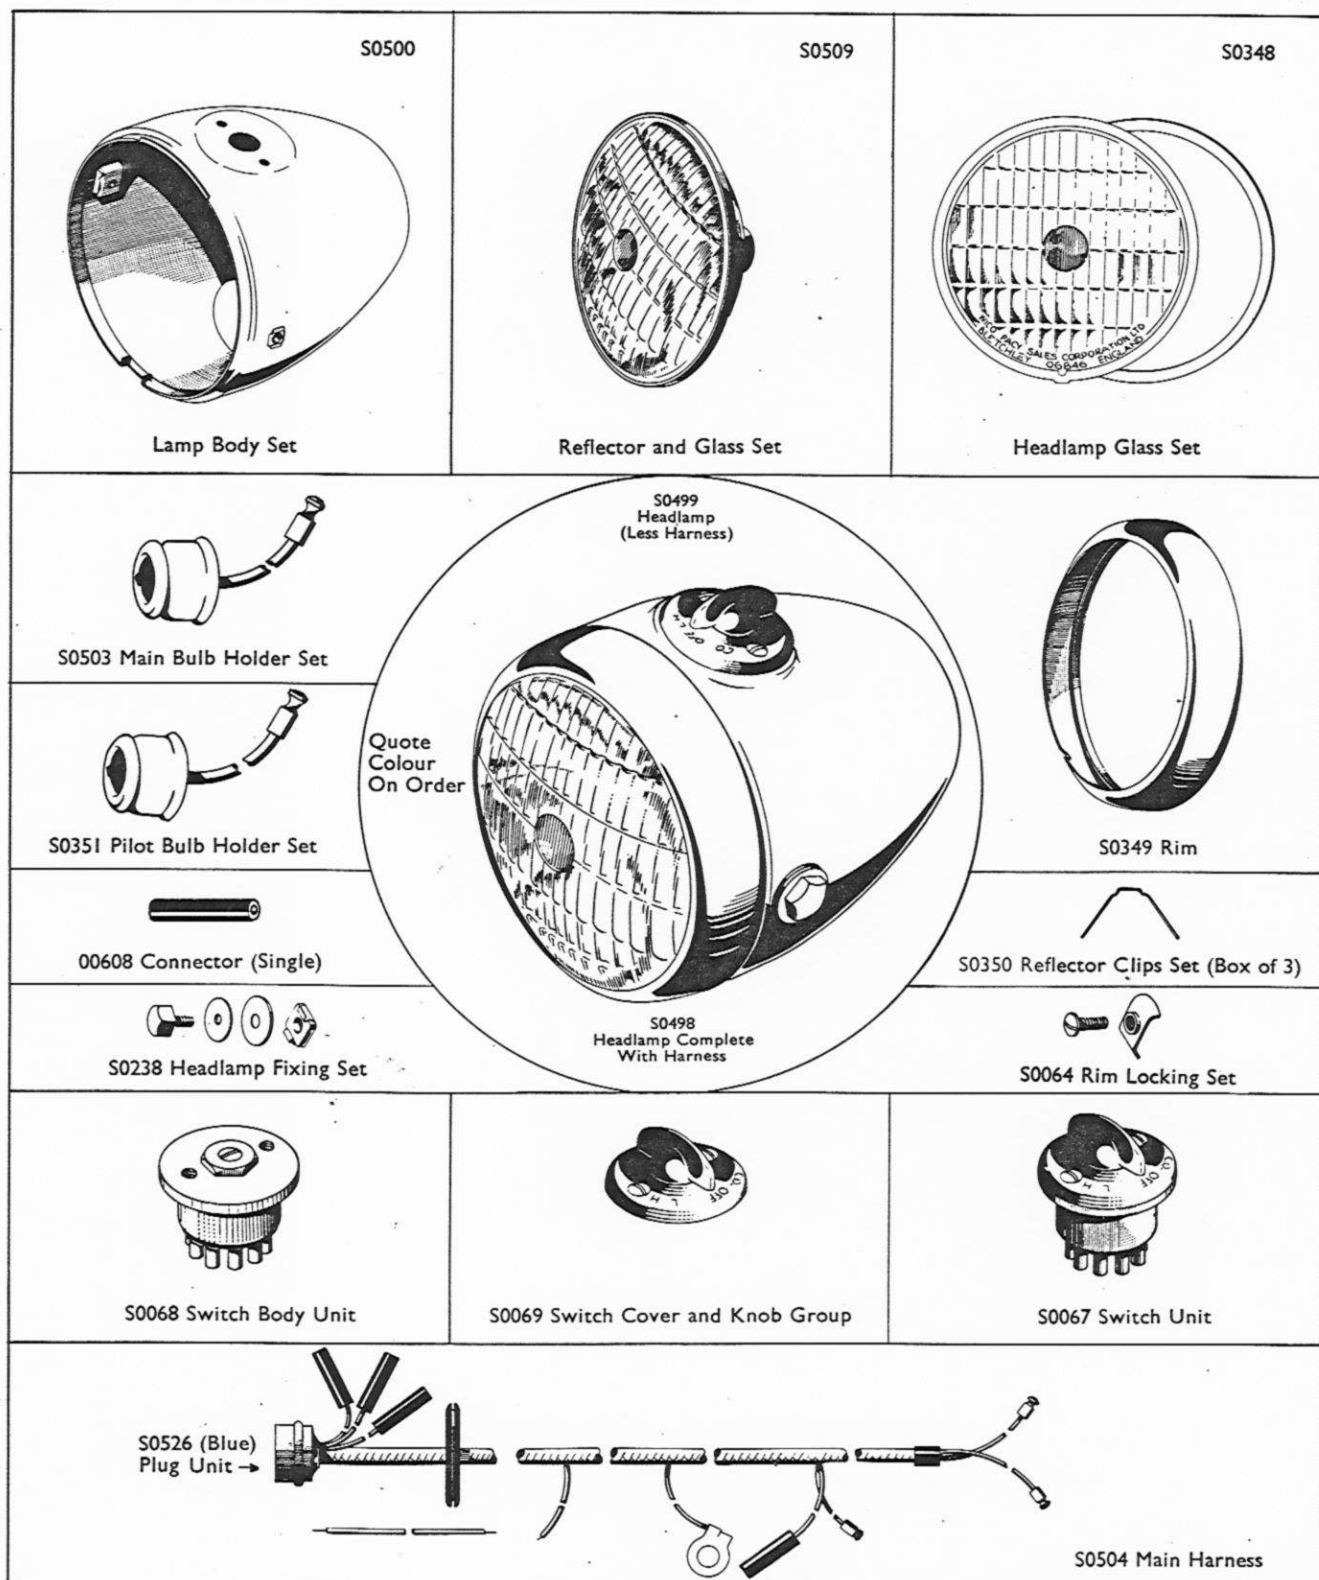





WIRING WIPAC DIAGRAM

DUNKLEY WHIPPET 60 SCOOTERETTE

MODELS PRODUCED FROM MARCH 1957

THE WIPAC GROUP · BLETCHLEY · ENGLAND

UNITS FOR SPARES	PART No.
Headlamp (complete)	S0498
Headlamp (less harness)	S0499
Harness	S0504
Horn Push	No. 10
Ignition—Generator	IG1480
Parking & Rear Lamp	S0213

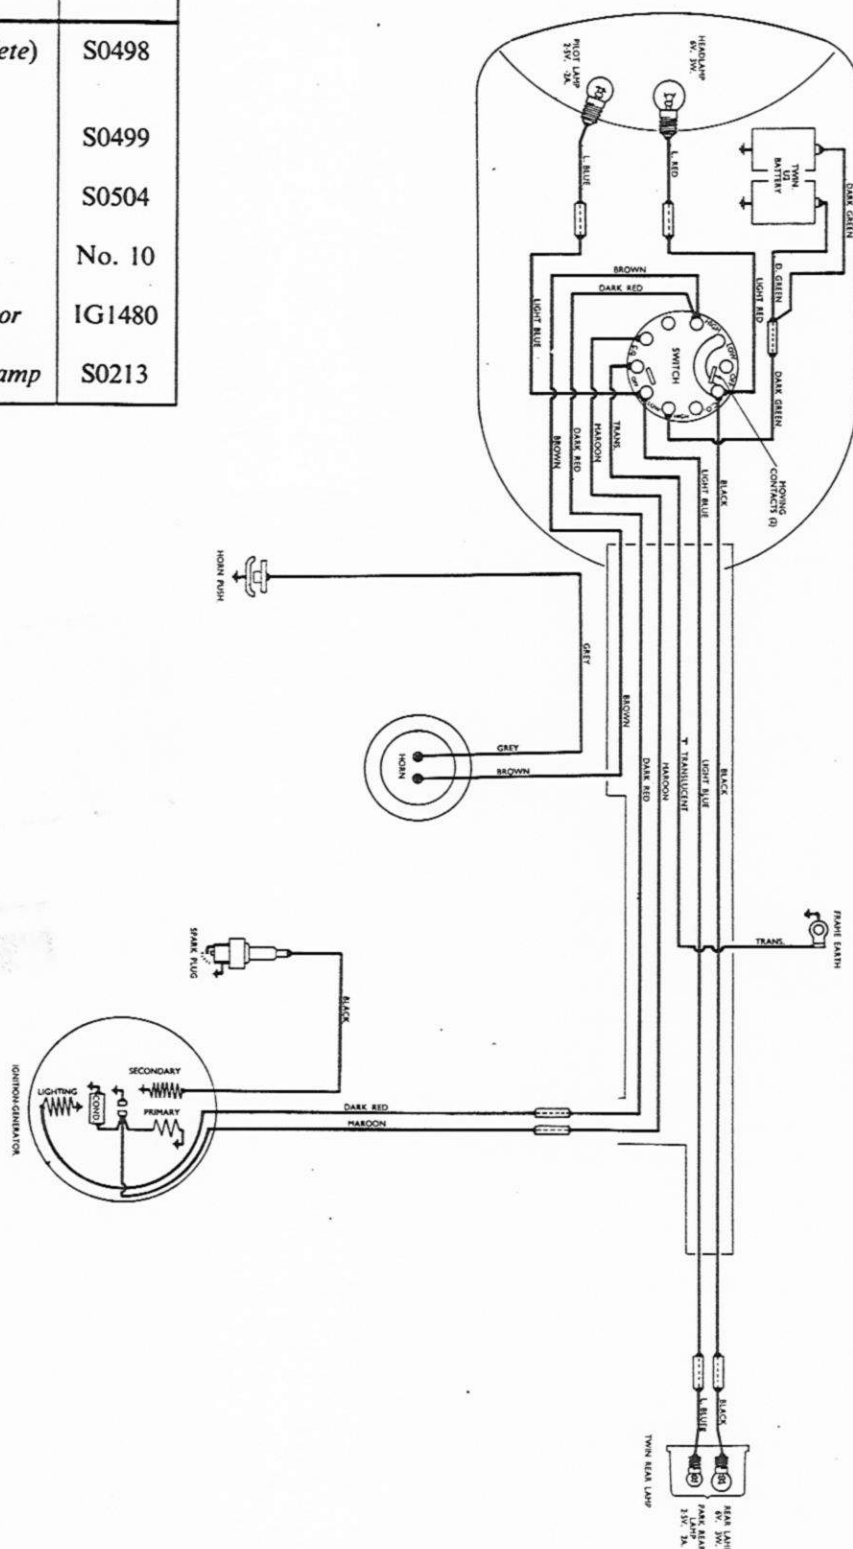

INTRODUCTION

This Flywheel magneto features a high spark output for easy starting and provides unprecedented slow or high speed performance. It consists of two main parts; a FLYWHEEL and a STATOR PLATE, and through its simplicity should require little or no attention over long periods of service.

The Flywheel (finned or plain) contains a permanent magnetic unit of a special alloy which concentrates a powerful magnetic charge within a small space and volume. By virtue of its ability to retain indefinitely this high magnetic concentration, the flywheel is able to provide the magneto with extraordinary high spark output throughout its entire life. The inductive characteristics are such that the magneto yields a maximum spark output over a wider timing range, thus eliminating the frequent adjustment of breaker points that is necessary with the conventional type instrument.

The Stator Plate contains the necessary H.T. coil or coils mounted on a laminated core, breaker mechanism and condenser. Usually, one H.T. coil is embodied per engine cylinder. All are easily accessible for servicing.

SERVICING

Checking magneto for spark

If the engine fails to start and there is indication that the magneto is at fault:—

- (A) Disconnect H.T. lead from the spark plug and hold it about $\frac{3}{16}$ " away from some unpainted portion of the frame or engine. Rotate the engine and a spark should jump this gap.
- (B) If no spark is visible:—
 1. Check H.T. lead for continuity.
 2. Check contact breaker points for correct gap setting and see that they are clean.
Check breaker point adjustment screws for tightness.
 3. By removing the flywheel examine the internal leads for breaks and see they are all properly secured. Make sure covered leads are not chafed and earthing.
 4. Make sure there are no metallic particles inside the unit.
 5. If the insulation of the H.T. coil has broken down it will show signs of charring on the outside but it is unlikely that this will happen in normal use.

Flywheel

This unit is robustly constructed and it is unlikely to develop any faults in normal use. A KEEPER RING IS NOT NECESSARY WHEN WITHDRAWING IT FROM THE STATOR PLATE.

Removal. Remove the nut securing the flywheel to the shaft. If an extractor is not available and the flywheel cannot be easily withdrawn, grasp the flywheel firmly and while attempting to pull it off tap the end of the crankshaft with a mallet or lead hammer, being careful during this operation not to damage the thread. When replacing the flywheel make sure metalized dust or small steel items have not been attracted onto the magnets.

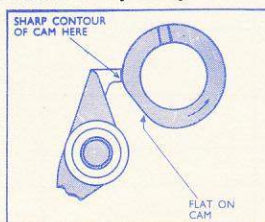
Condenser

A weak or faulty condenser can be detected by badly burnt and pitted contacts or a continuous intense blue spark across the contacts when running. A very small white spark across the points when running is normal.

The condenser can be removed by undoing the one or two screws securing it and releasing the lead from it.

H.T. coil

Removal. First remove the laminated



THIS MAGNETO IS FITTED AS
STANDARD EQUIPMENT ON

DUNKLEY WHIPPET 60

AND

MERCURY MERCETTE

MAIN DETAILS

Wipac Type	Series 90
Lighting output	6 volt 9 watt
Rotation	C.C.W.
Flywheel type	Plain
„ weight	34 ozs.
„ diameter	4 $\frac{5}{16}$ "
Breaker point setting	.018"
H.T. Lead	5 mm. 18"
Engine cylinders	Single
Flywheel extractor	00494

For complete service instructions see leaflet S90/1

core complete, then take off the coil from the core. Release condenser lead before removing core. Considerable force may be necessary to remove coil from core. A fibre wedge is sometimes used to ensure a tight fit.

Contact breaker points

The majority of flywheels have holes or slots in them to allow for point adjustment and the correct setting is mentioned in the panel above. If there is no slot in the flywheel it will have to be removed for point adjustment.

Adjustment. Turn engine over until points are fully open. See sketch.

Test with feeler gauge between "points". If the "points" require adjustment two screw heads will be seen beside them. Slacken the large screw and carefully turn the small screw, which is eccentric, until the correct gap is obtained. Tighten large screw.

The breaker point setting should only be adjusted in the manner described and at no time should the fixed contact be loosened or the breaker arm bent to provide adjustment.










The moving contact is integral with the breaker arm. If the contact points need replacement it is recommended that both the fixed and movable points be replaced at the same time.

Lubrication

After every 1,000 hours re-lubricate the cam grease pad. To do this, slide the pad out from its holder and squeeze and work into it a Summer grade of motor transmission grease. Do not use oil.




PARTS IN EXPLODED VIEW	COMPONENTS	SETS	UNITS	
			01838 Cover Unit	
		1146F Flywheel Key		
			00482 Flywheel Unit	
		1146F Cam Key		
	00476 Breaker Cam		S0301 Breaker Cam Set	
	02441 Breaker Cam Washer			
		06486 Breaker Point Fixing Set	S0308 Stator Plate Unit	
		00695 Breaker Point Set		
	06484 Condenser Fixing Set	06483 Condenser Set (includes 06484)		
	00689 Breaker Point Support Plate			
	S0288 Coil Lead and Core Fixing Set	S0305 Coils and Core Set		
	00468 Cam Grease Pad			
	00742 Core Group			
	S0010 H.T. Coil Set (includes S0011)			
	S0304 L.T. Coil Set	S0306 Stator Plate Assembly	S0307 Earth Lead Set	
	S0011 H.T. Coil Terminal Shield and Grommet Set			
		S0300 L.T. Terminal Set	00500 L.T. Lead Group	
			00465 H.T. Lead Group (18")	

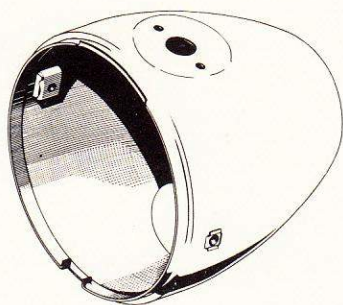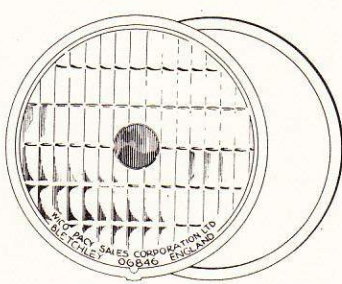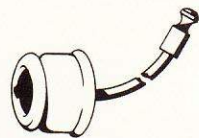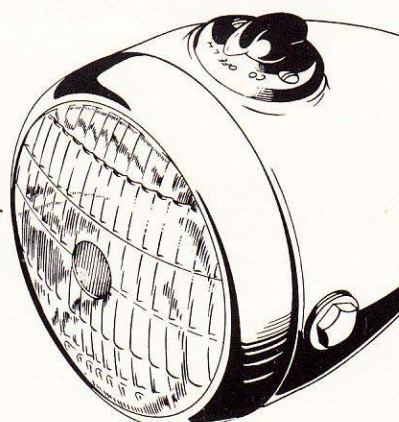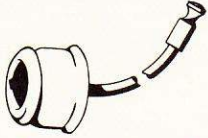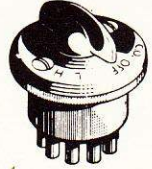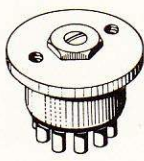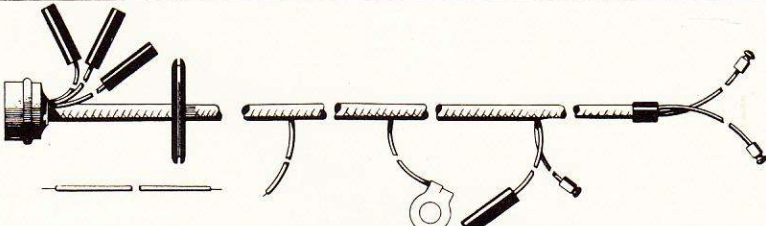S0500  Lamp Body Set	S0509  Reflector and Glass Set	S0348  Headlamp Glass Set	
S0503 Main Bulb Holder Set 	S0499 Headlamp (Less Harness)  Quote Colour On Order S0498 Headlamp Complete With Harness		S0349 Rim 
S0351 Pilot Bulb Holder Set 			S0350 Reflector Clips Set (Box of 3) 
00608 Connector (Single) 			S0064 Rim Locking Set 
S0238 Headlamp Fixing Set 			S0067 Switch Unit 
S0068 Switch Body Unit 	S0069 Switch Cover and Knob Group 		
S0526 (Blue) Plug Unit →  S0504 Main Harness			



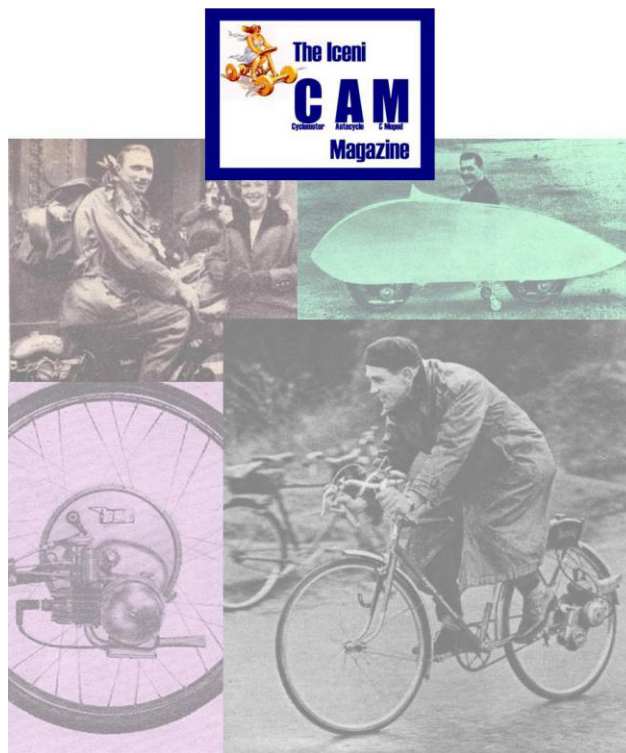IceniCAM On-Line Library



www.icenicam.org.uk